

## ACP-02 Addressable Manual Call Point Flush Mount

Item Number: 4255-0250

### Installation guide

#### Description

The Ampac ACP-02 double action re-settable Manual Call Point (MCP) eliminates the possibility of accidental operation and the cost and labour of replacement of frangible elements.

#### Features

- Testing of operation without removal of front cover
- Resettable operation
- LED indication
- Suits standard mounting control wall box

#### Installation

*Observe anti-static precautions at all times*

#### Flush Mounting

1. Remove the securing screw from the front of MCP while at the same time pulling the top of the facia away from the backing plate
2. Set the address of the MCP (See Figure 2)
3. Place the spacer to the back of the MCP as shown above and terminate the cables (See Figure 1)
4. Fix the backing plate and spacer to the wall box using two (2) appropriately sized fixing screws
5. Set the address of the MCP (See Figure 2)

6. Remove the two (2) thread protection plugs from the mounting box and fix the backing plate to it using the two (2) fixing screws supplied


7. Replace the facia by inserting the two (2) bottom locating pegs of the facia up into the bottom of the locating holes of the backing plate, close at the top, tighten the retaining screw then insert the key (as shown) to reset the operation element

#### 8. Testing of MCP Operation

1. Isolate the FACP from calling the fire brigade
2. Press on the clear ABS operation element in the location indicated, PUSH HERE to drop the element down
3. Operate the switch, the MCP LED should illuminate and an alarm at the FACP should be indicated
4. To reset the operation element firmly push the key up into the slot in the bottom of the facia

**Note 1:** Set the device type in FireFinder ConfigManager to S90 MCP

**Note 2:** To ensure line monitoring integrity always use one (1) set of terminals for "IN" and one (1) set for "OUT".

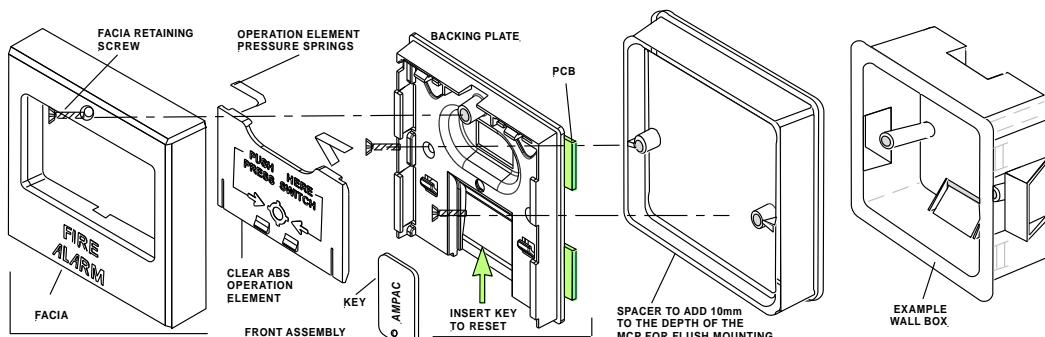

FACIA WITH THE  
OPERATION ELEMENT  
IN THE RELEASED POSITION

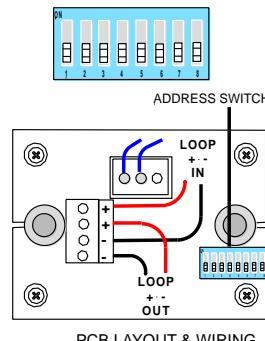


Figure 1: General Wiring Diagram

**ACP-02 Addressable Manual Call Point Flush Mount**

Item Number: 4255-0250

**Installation guide**

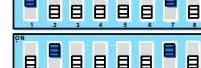
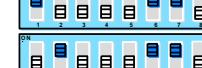
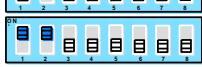
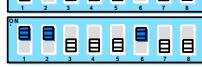
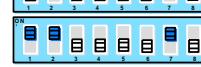
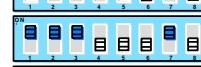
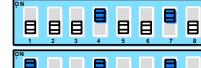
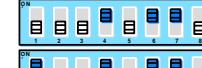
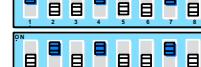
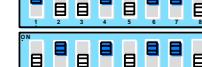
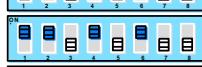
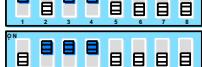
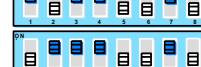
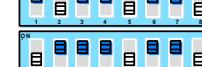
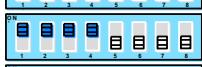
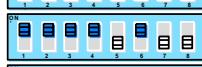
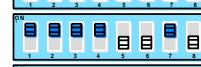
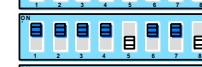
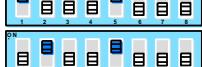
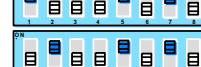
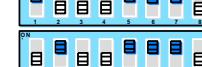
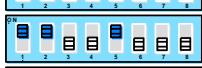
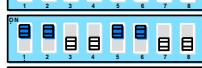
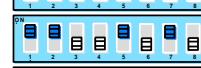
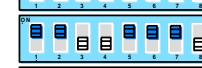
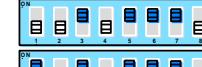
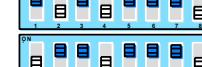
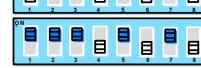
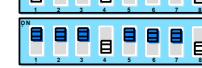
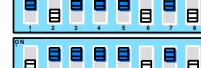
 
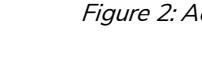
 
	0		32		64		96
	1		33		65		97
	2		34		66		98
	3		35		67		99
	4		36		68		100
	5		37		69		101
	6		38		70		102
	7		39		71		103
	8		40		72		104
	9		41		73		105
	10		42		74		106
	11		43		75		107
	12		44		76		108
	13		45		77		109
	14		46		78		110
	15		47		79		111
	16		48		80		112
	17		49		81		113
	18		50		82		114
	19		51		83		115
	20		52		84		116
	21		53		85		117
	22		54		86		118
	23		55		87		119
	24		56		88		120
	25		57		89		121
	26		58		90		122
	27		59		91		123
	28		60		92		124
	29		61		93		125
	30		62		94		126
	31		63		95		127

Figure 2: Address Switch Settings