

## FireFinder 8 Way Relay Board

Item Number: 159-0013

### Installation guide

#### Description

Relay Outputs: Each 8-Way Relay Board 302-676 is fitted with eight relays (RL1 to 8) with 5A voltage-free contacts which can be used for control (e.g. releasing doors) or monitoring (e.g. driving indicators, door open/closed) purposes.

The 302-672 Input / Output Board is then used to provide the interface between the Slave CPU and this board.

The Input / Output Board connects to the Slave CPU via CN1. Dependant on configuration a maximum of 8 Input / Output Boards can be daisy chained together though only three pre-positioned mounting areas have been allocated within the FACP.

#### Installation

1. Turn off the mains power and disconnect the batteries.
2. Fit the 8 Way Relay Board and standoffs to the pre-positioned holes in the left-hand side of the backpan.
3. Cable CN1 of the 8 Way Relay Board to CN4 or 5 of the I/O Board.
4. Install the 302-672 as per its Installation Guide.
5. Power up the FACP, and connect the batteries.
6. Program the FACP and test.

*Observe anti-static precautions at all times.*

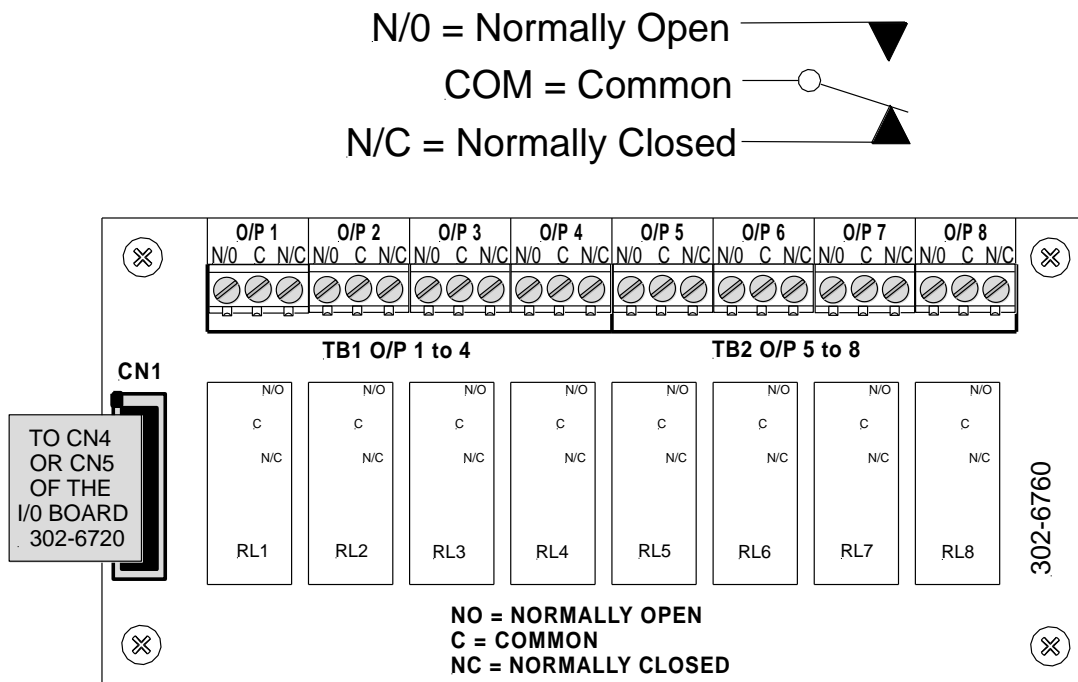


Figure 1: General Wiring Diagram